

En The D70 Firmware Update


The following features are available when the camera A and B firmware is updated to version 2.00.

Camera Menus

Camera menus have been redesigned to make them easier to read.



Menus before update

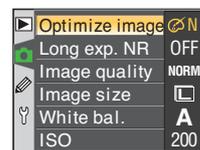


Menus after update

PictBridge Printing Options

Page size can now be selected when pictures are printed via direct USB connection. The following replaces the relevant sections of pages 177 and 180 of the *Nikon Guide to Digital Photography with the D70*.


1 Connect the printer as described on page 176 of the *Nikon Guide to Digital Photography with the D70* and turn the camera on. A welcome screen will be displayed in the camera monitor, followed by a PictBridge menu.

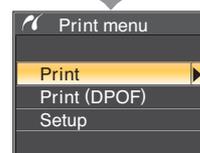

2 Press the multi selector up or down to highlight **Setup** and press the multi selector to the right.



3 The menu shown at right will be displayed; press the multi selector up or down to highlight an option, then press the multi selector to the right to make the selection.

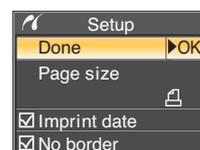

Option	Description
Done	Save changes and return to PictBridge menu.
Page size	Choose page size. Press multi selector up or down to highlight  (printer default or page size selected with current printer), 3.5" x 5" , 5" x 7" , Hagaki , 100 mm x 150 mm , 4" x 6" , 8" x 10" , Letter , A3 , or A4 , then press to right to select.
Imprint date	Check to print date of recording on each picture.
No border	Check to print pictures without white border (if supported; some printers will ignore this option).

